



PROPORTIONING VALVE INSTRUCTIONS

Brake light warning switch

(Master cylinder NOT included)

To right front

To rear

To left front

