


We use a belt length of $35\frac{3}{4}$ " - $36\frac{1}{4}$ " with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

This bracket requires the use of an aluminum V-belt pulley.

Note: If your pump has threaded mounting holes it will be necessary to drill them to $\frac{5}{16}$."

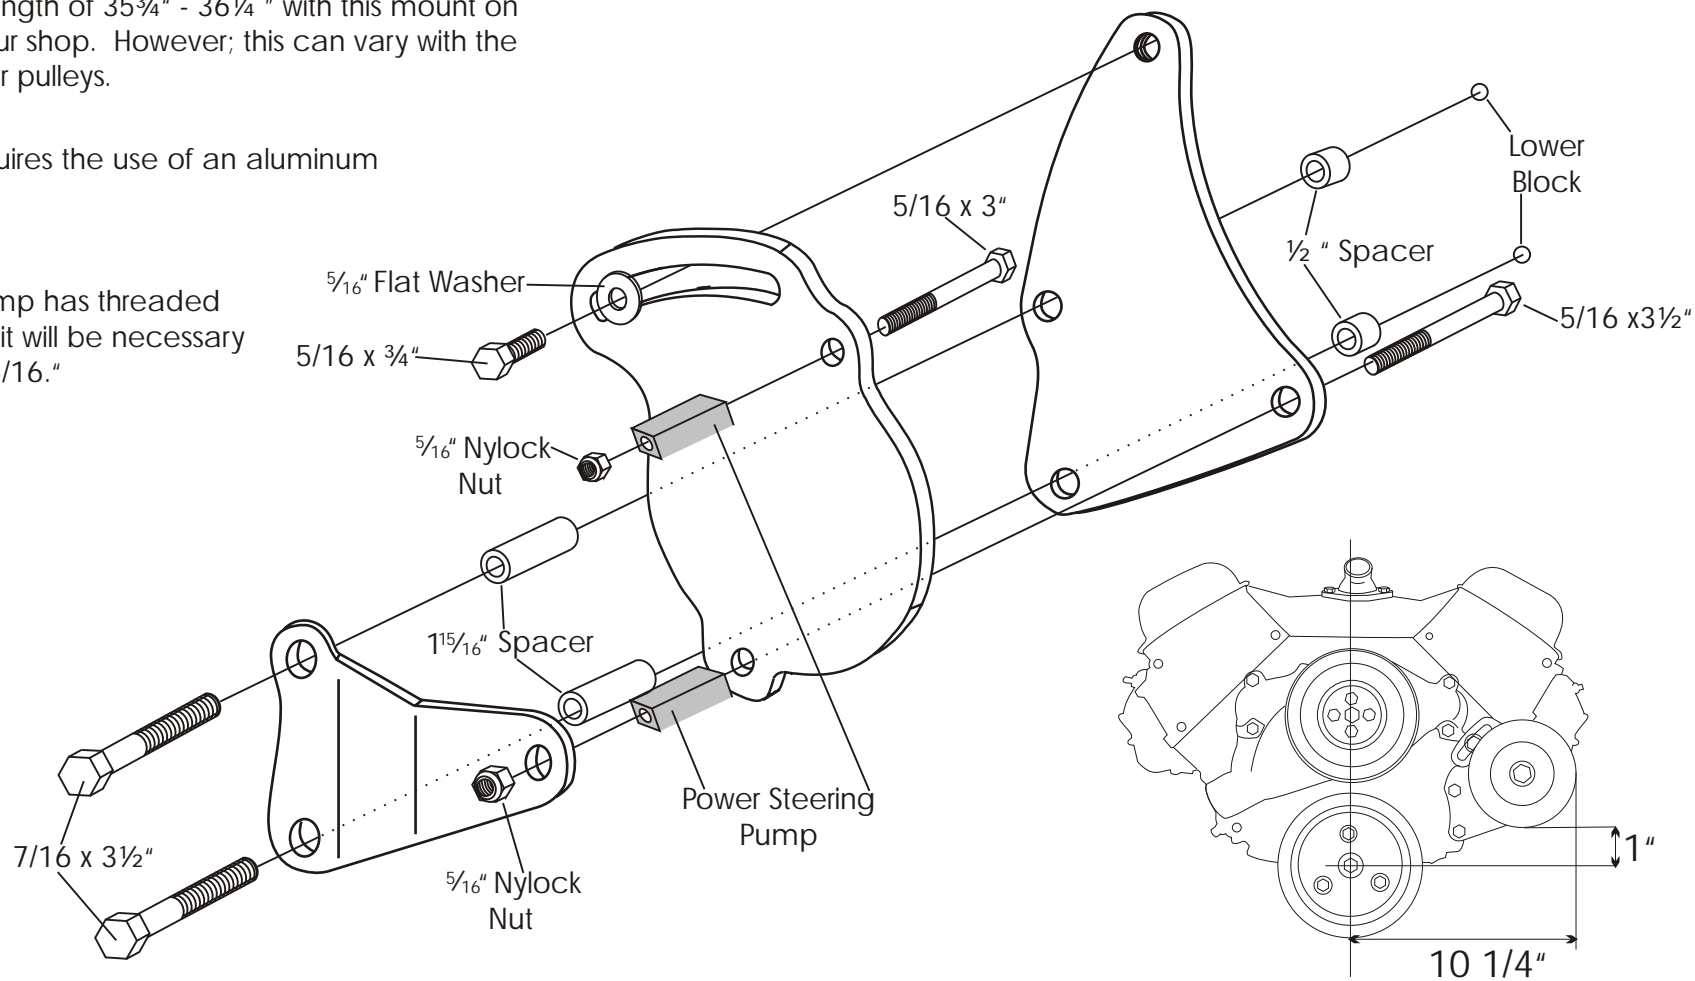

Disclaimer

- The purchaser is responsible for determining the suitability of any or all products purchased from Tuff Stuff Performance Accessories LTD.
- The customer recognizes that Tuff Stuff products may not be a direct replacement for their original, and some modifications may be necessary.
- Tuff Stuff will not influence your use of this product in your vehicle in any manner.
- Any Tuff Stuff product shall be installed at your own discretion.
- Remember: Any Tuff Stuff product must be installed by a professional mechanic.
- Chrome plated products returned for proposed warranty with scratches or chips will not be considered for refund or replacement.



Power Steering
Pump Mount
6505A
6505B

Big Block Chevy - Driver's Side
Short Water Pump