

Part# 7668


This mount is designed to be used with 1972 and later standard rotation long water pumps.

Note: Install bolts into the water pump first. Then determine the number of spacer washers needed between the bracket and intake manifold. This will vary with the thickness of the various brands of manifolds. **START ALL MOUNTING BOLTS BEFORE TIGHTENING.**

Note: Without proper spacer washers installed; Alternator will not align with pulleys.


Belt info. We use a belt length of 52 to 53" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

Standard belt widths are 3/8" and are designated by the first number in the belt part number. Belt width by brand are as follows:
Gates: 7 Series followed by length
AC Delco: 15 Series followed by length
Dayco: 15 Series followed by length
NAPA: 15 or 25 Series followed by length

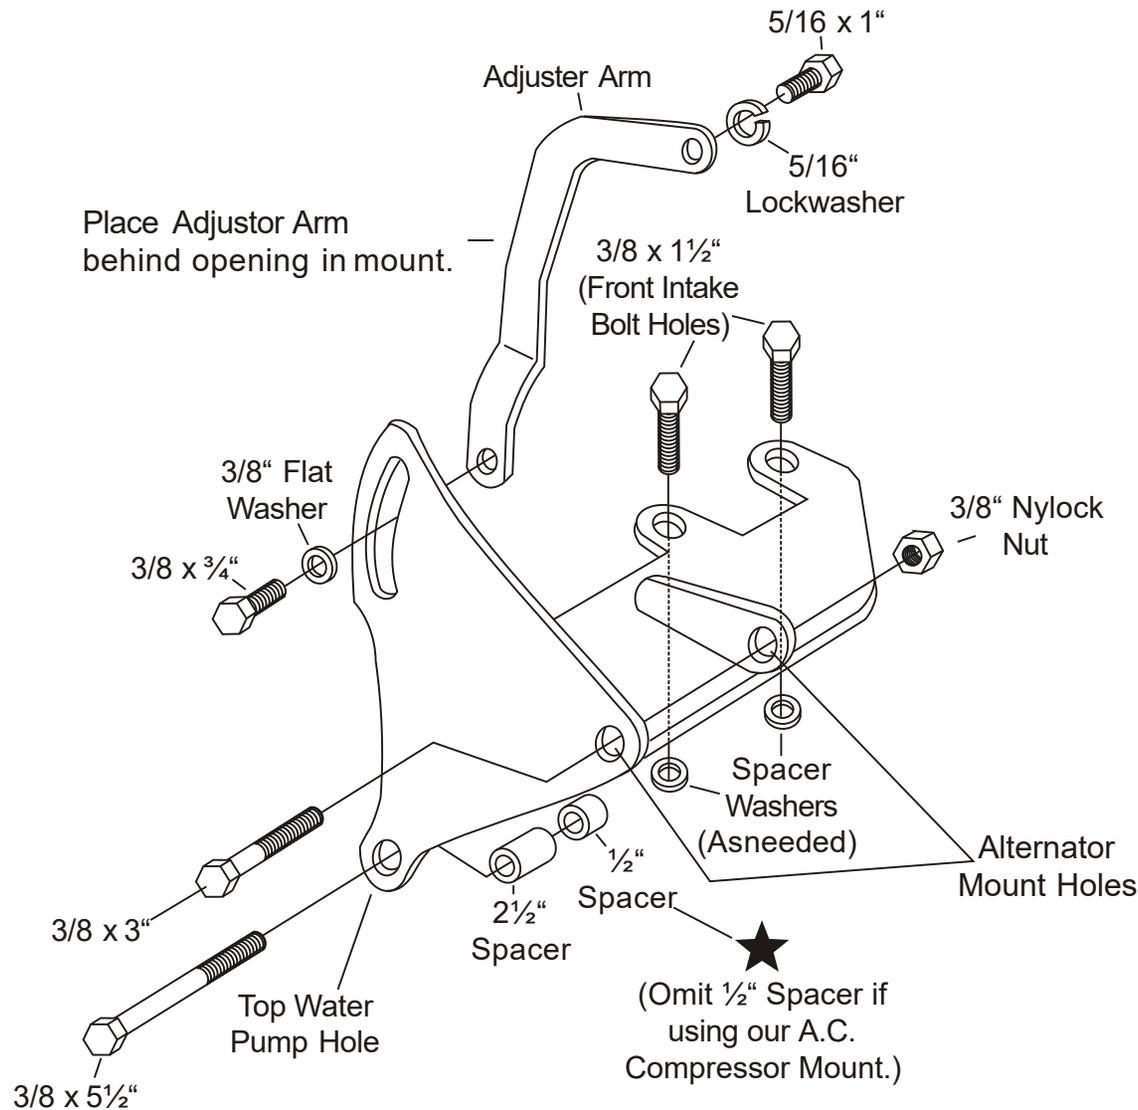

Disclaimer

- The purchaser is responsible for determining the suitability of any or all products purchased from TuffStuff Performance Accessories LTD.
- The customer recognizes that TuffStuff products may not be a direct replacement for their original, and some modifications may be necessary.
- TuffStuff will not influence your use of this product in your vehicle in any manner.
- Any TuffStuff product shall be installed at your own discretion.
- Remember: Any TuffStuff product must be installed by a professional mechanic.
- Chrome plated products returned for proposed warranty with scratches or chips will not be considered for refund or replacement.

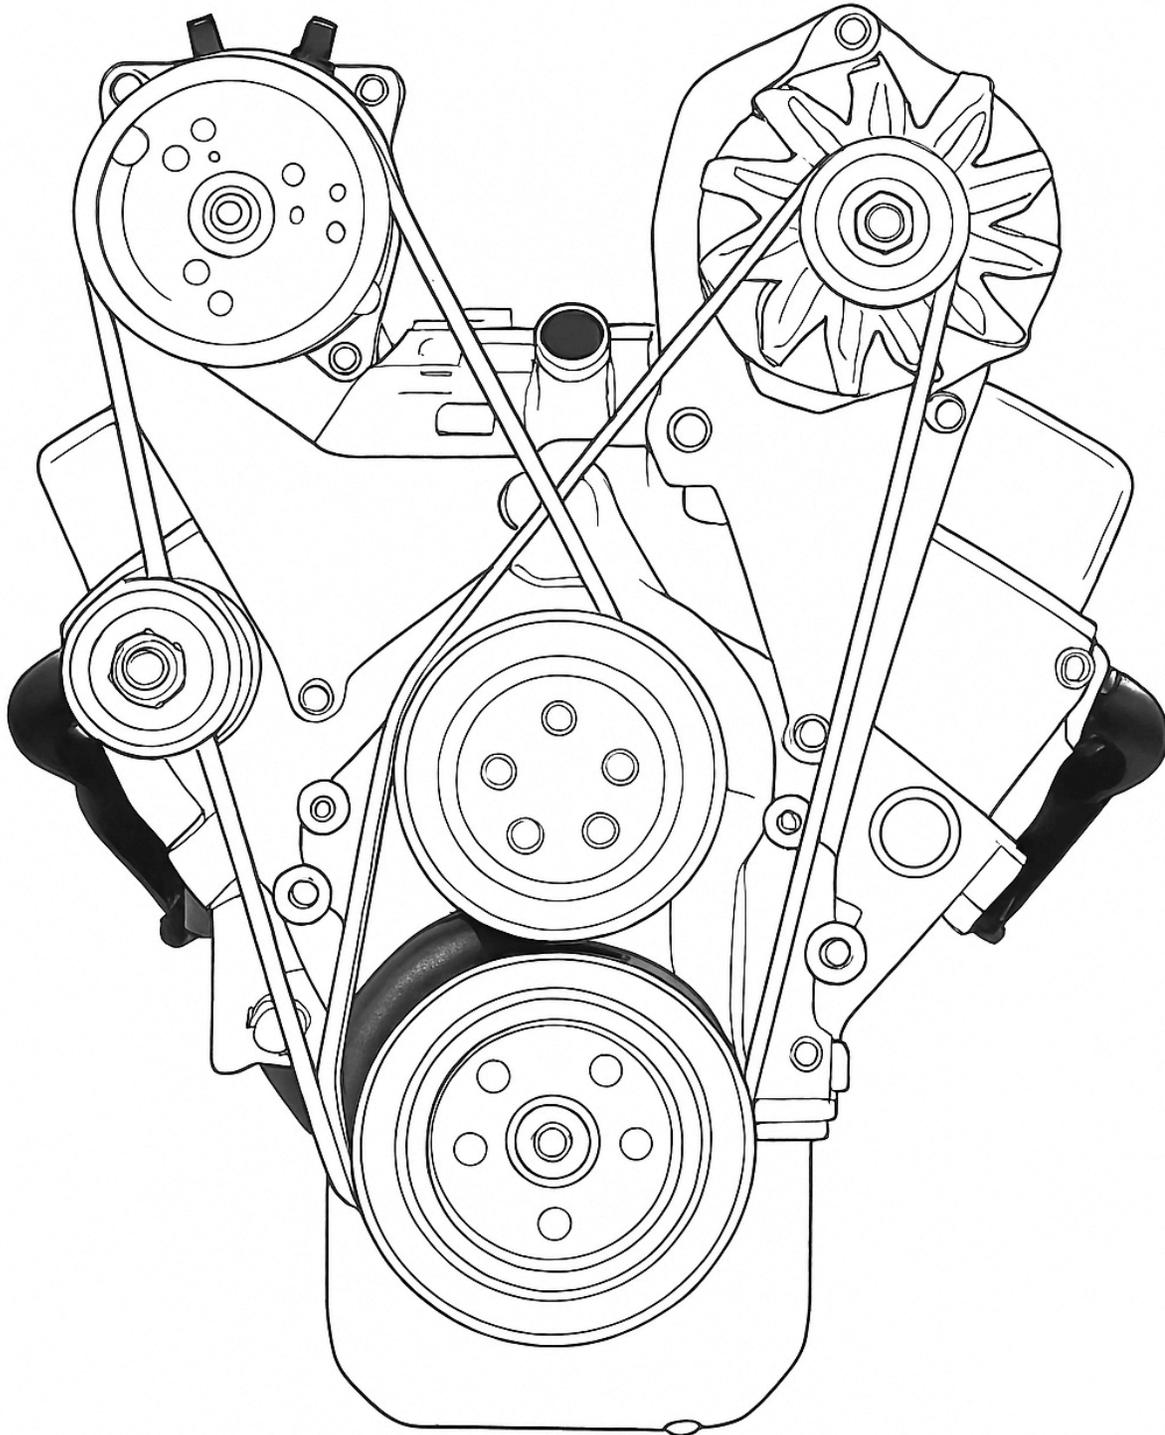

Alternator
Mount
7668

Small Block Chevy - Drivers Side
Long Water Pump